



# RCM 024-11-U Connections / Pairing Guide

RCM 024-11-U remote receiver

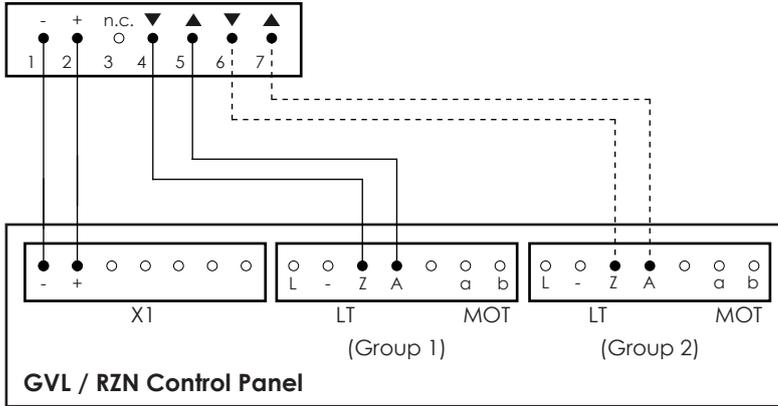

RCM 024-11-U remote receiver

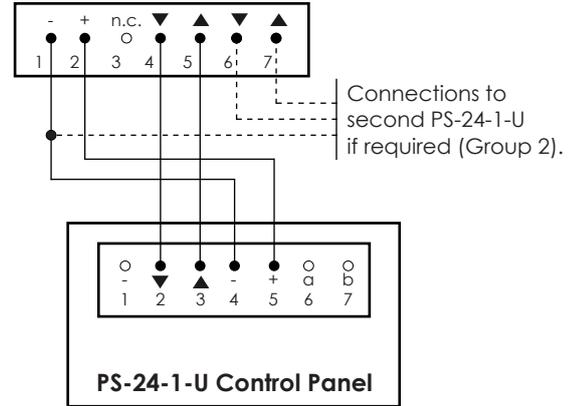

Pairing RCR 11 remote control to RCM 024-11-U	
<b>Start</b>	<p><b>Start:</b> Hold the <b>set button</b> for 5 seconds or until a single beep is heard, the control panel is now in pairing mode.</p>
<b>Level 1</b>	<p><b>Level 1 (pairing of Group 1):</b> The RCM will be emitting a single beep every 5 seconds. Press and hold the <b>right/down button</b> of the first selector on the RCR 11 remote control for 2 seconds or until a short confirmation beep is heard.</p> <p>If Group 2 is required, press the <b>left/up button</b> on the remote control once and see Level 2. If not, skip to Level 3 by pressing the <b>left/up button</b> twice.</p>
<b>Level 2</b>	<p><b>Level 2 (pairing of Group 2):</b> The RCM will now be emitting a double beep every 5 seconds. Press and hold the <b>right/down button</b> of the second selector on the remote control for 2 seconds or until a short confirmation beep is heard.</p> <p>Press the <b>left/up button</b> on the remote control and see Level 3.</p>
<b>Level 3</b>	<p><b>Level 3 (non-latching/latching):</b> The RCM will now be emitting a triple beep every 5 seconds. As standard the RCM operates in non-latching mode (window will only open if the button is held). If latching mode is required instead (window opening fully from a single press of the button), press and hold <b>right/down button</b> for 2 seconds.</p>
<b>End</b>	<p><b>End:</b> To complete the pairing process, press the set button, a single confirmation beep will be heard. The remote control is now paired to the control panel.</p>